LS02-A3 Slim Box Installation manual (18mm)

Drawer Breakdown Diagram

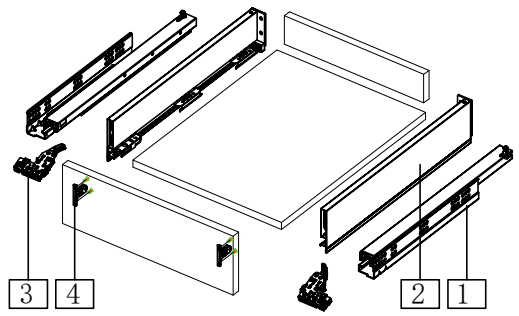

Accessories

1.Concealed drawer slide Left/Right
Length
250/300/350/400/450/500/550

2.Drawer side & decorative cap Left/Right
Length
250/300/350/400/450/500/550

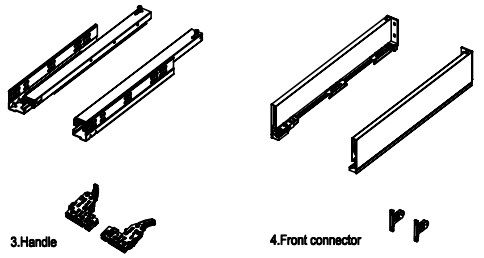

Bottom and rear panel(18mm)

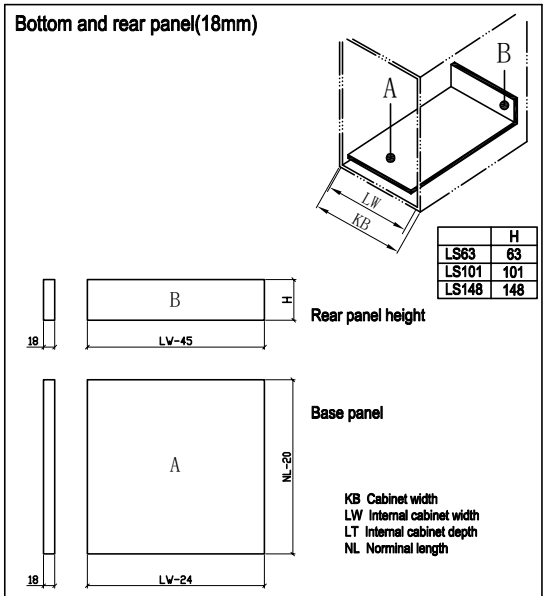

	H
LS63	63
LS101	101
LS148	148

KB Cabinet width
LW Internal cabinet width
LT Internal cabinet depth
NL Norminal length

Runner Installation(mm)

Norminal length

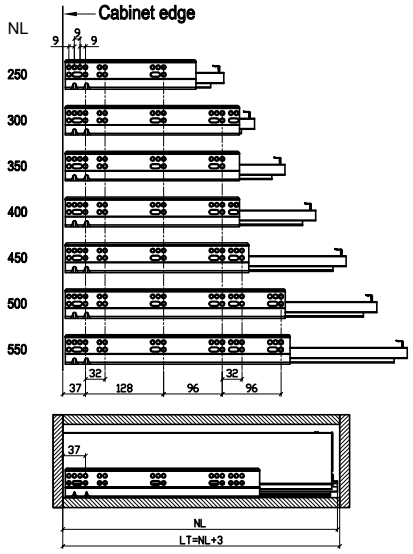

Cabinet space requirements(mm)

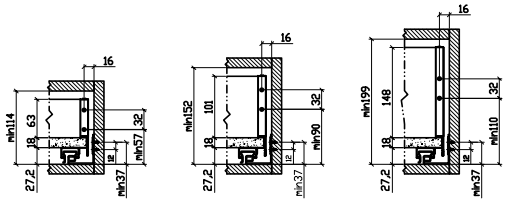

Rear panel drilling(mm)

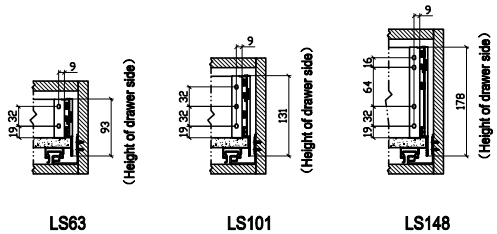

Drawer Assembly

1.Merge the left/right sides of the drawer with the bottom plate;

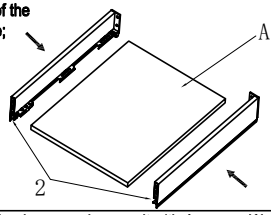

2.Fix the bottom plate and drawer with six self tapping screws;

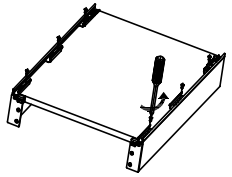

3.Insert the back panel into the drawer and secure it with 4 screws; We need to The upper end face of the backboard is flush with the upper end face of the drawer

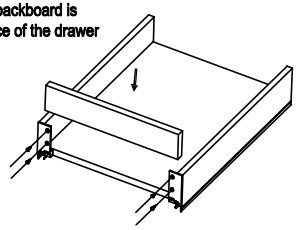

4.Fix the front connector on the back of the panel with four self tapping screws;

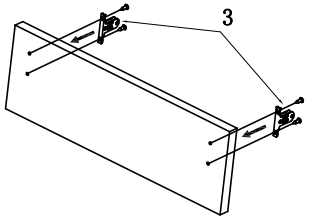

5.Position the assembled panel into the drawer side's clip slots, then press down fully until locked in place;

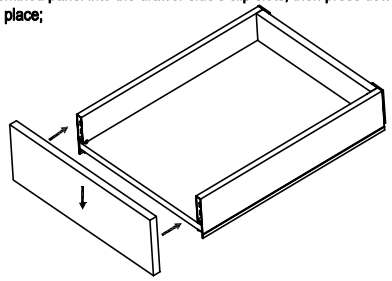

6.Secure the handle to the drawer bottom panel using 6 screws;

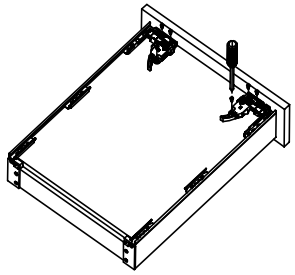

7. Assemble the guide rail onto the cabinet and keep it in a retracted state;

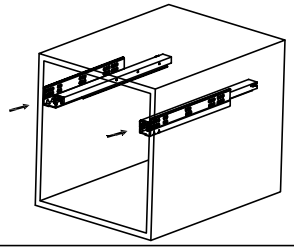

8. Place the assembled drawer on the guide rail and push it in as far as possible.When you hear a "click", the drawer is pushed into place;

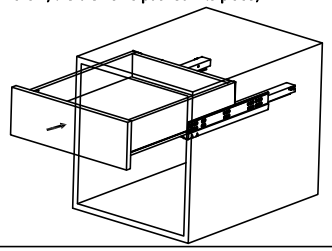
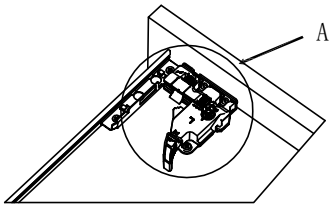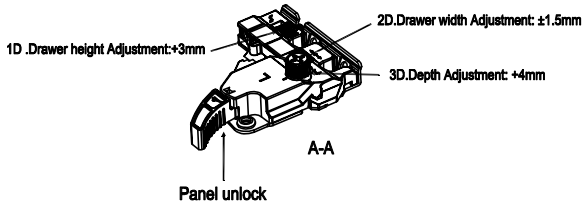
9.Adjustment of drawer and cabinet assembly effect;